

ViewSonic®

E771

Color Monitor

User's Guide


Guide de l'utilisateur

Bedienungsanleitung

(Latin American Spanish)

(Italian)

(Brazilian Portuguese)

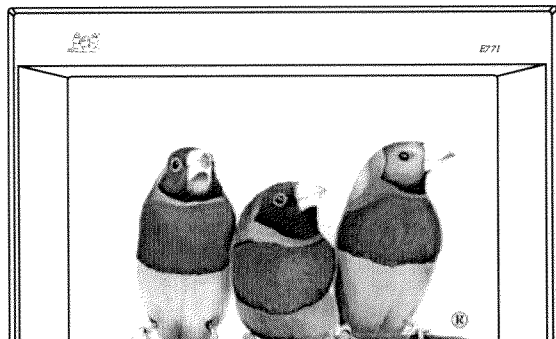

Copyright © ViewSonic Corporation, 1999. All right reserved.

Power Macintosh is a registered trademark of Apple Computer, Inc.

Microsoft, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

ENERGY STAR is a registered trademark of the U.S. Environmental Protection Agency (EPA).

VESA is a registered trademark of the Video Electronics Standards Association. DPMS and DDC are trademarks of VESA.



Power Cord Safety Guidelines (continued)

AC PLUG CORD PRECAUTIONS FOR THE UNITED KINGDOM

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET THEN THE PLUG SHOULD BE CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO AN APPROPRIATE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning:

To assure continued FCC compliance, the user must use the grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

CONTENTS

Getting Started

Package Contents	5
Precautions	5
Quick Installation*	6

Operation

Front Control Panel	7
Main Menu	7

Other Information

Specifications	10
Troubleshooting	11
Cleaning the Monitor	12
Limited Warranty	13
Customer Support	back cover

*To meet your future needs, and to receive any additional product information as it becomes available, please register your monitor's warranty on the Internet at: <http://www.viewsonic.com>.

Getting Started

Congratulations on your purchase of a **ViewSonic E771** color monitor.
Important! *Save the original box and all packing material for future shipping needs.*

NOTE: This product was designed for operation in the magnetic fields of the

Quick Installation

1 Connect video cable

Make sure both the monitor and computer are powered OFF.

- Connect the video cable to the computer, then to the monitor.

Macintosh® users: Connect a Macintosh adapter to the video cable, then to the computer. To order a ViewSonic® Macintosh adapter, contact ViewSonic (see the back cover of this guide). You will need to provide your monitor's serial number.

2 Connect power cord

Connect the power cord to a properly grounded AC outlet.

3 Power-ON computer and monitor

Power-ON the computer, then Power-ON the monitor.

NOTE: At this point Windows® 98 users may receive a message asking them to install the monitor's INF file. Insert the enclosed CD-ROM, wait for it to auto-load, select "Monitor Drivers" and follow the on-screen instructions.


4 For best image quality:

Set your graphic card's timing (resolution and refresh rate) to **1024x768@75Hz**.

Installation is complete!

Enjoy your new monitor!


To be best prepared for any future customer service needs, write the serial number (see back of this guide.)

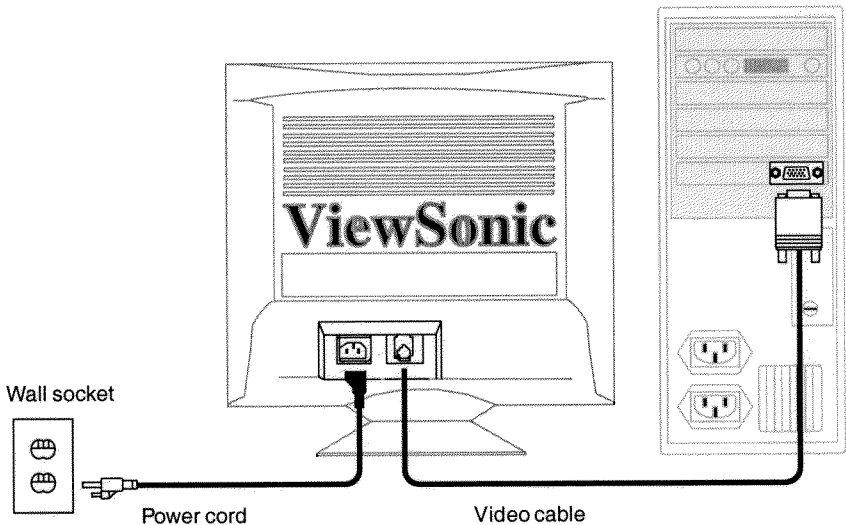

Operation



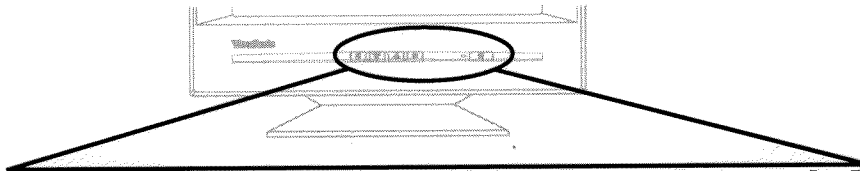


Front Control Panel

With your monitor turned on, follow the numbered steps in sequence as shown below.



To exit a screen and save changes, press button [1].

Press button [2] to toggle between all controls that appear in pairs on the menu.

-  **CONTRAST** adjusts foreground white level of screen image.
[▼] *decreases* contrast, [▲] *increases* contrast.
-  **BRIGHTNESS** adjusts background black level of screen image.
[▼] *decreases* brightness, [▲] *increases* brightness.
-  **HORIZONTAL SIZE** adjusts the width of screen image.
[▼] *decreases* width of screen image, [▲] *increases* width of image.
-  **HORIZONTAL POSITION** moves screen image left or right.
[▼] moves screen image to *left*, [▲] moves screen image to *right*.
-  **VERTICAL SIZE** adjusts height of screen image.
[▼] *decreases* height of screen image, [▲] *increases* height of image.

To exit a screen and save changes, press button [1].



DEGAUSS corrects irregular colors appearing around edges of screen images. Degaussing removes build-up of magnetic fields that can affect color purity and convergence.

Press button [2] to manually degauss monitor.

Important: *After using Degauss wait at least 20 minutes before using this feature again. Do not degauss repeatedly. Doing so can be harmful to the monitor.*



VIEWMETER® (Display Frequency) displays signal input coming from your computer.

Press button [3] to select this feature.

Other Information

Specifications

CRT	Type	17" (16.0" viewable diagonal area), 0.27mm dot pitch, 90° deflection
	Phosphor Glass surface	RGB, medium persistence Anti-reflective and anti-static coating Standard light transmission rate = 46%
Input Signal	Video Sync	RGB analog (0.7Vp-p, 75 ohms), f _h : 30-70 kHz, f _v : 50-120 Hz
Compatibility	PC Macintosh®**1	up to 1280 x 1024 NI Power Macintosh® up to 1152 x 870
Maximum Refresh Rates**2		1280 x 1024 NI @ 66 Hz 1024 x 768 NI @ 87 Hz 800 x 600 NI @ 110Hz 640 x 480 NI @ 120 Hz
Power	Voltage	AC 100-240 VAC (auto switch) 50/60 Hz
Display Area	Factory setting Large scan	300mm (H) x 225mm (V) typical 327mm (H) x 245mm (V)
Operating Conditions	Temperature Humidity Altitude	32°F to 104°F (0°C to 40°C) 20% to 80% (no condensation) To 10,000 feet
Storage	Temperature	-40°F to +140°F (-40°C to +60°C)

Troubleshooting

No power

- Make sure power button (or switch) is ON.
- Make sure A/C power cord is securely connected to the back of the monitor and to a power outlet.
- Plug another electrical device (like a radio) into the power outlet to verify that the outlet is supplying proper voltage.

Power on but no screen image

- Make sure the video cable supplied with the monitor is tightly secured to the video output port on the back of the computer. If the other end of the

E
N

Cleaning the Monitor

LIMITED WARRANTY VIEWSONIC E771 MONITORS

What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, **ViewSonic** will at its sole option repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

ViewSonic E771 color monitors, including the display tubes, are warranted for three (3) years for all parts and three (3) years for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. ~~Repair or attempted repair by anyone not authorized by ViewSonic.~~

NOTES

E
N
G
L
I
S
H



Customer Service

To receive the most prompt assistance,
dial the appropriate number below and
*listen to all menu options before
making your selection:* Customer
Support. Technical Support. Parts. etc.